


**JOSEF[®]
STEINER**

Aufbauanleitung Pergola Dallas








Wir gratulieren Ihnen zum Kauf unseres Pergolas!




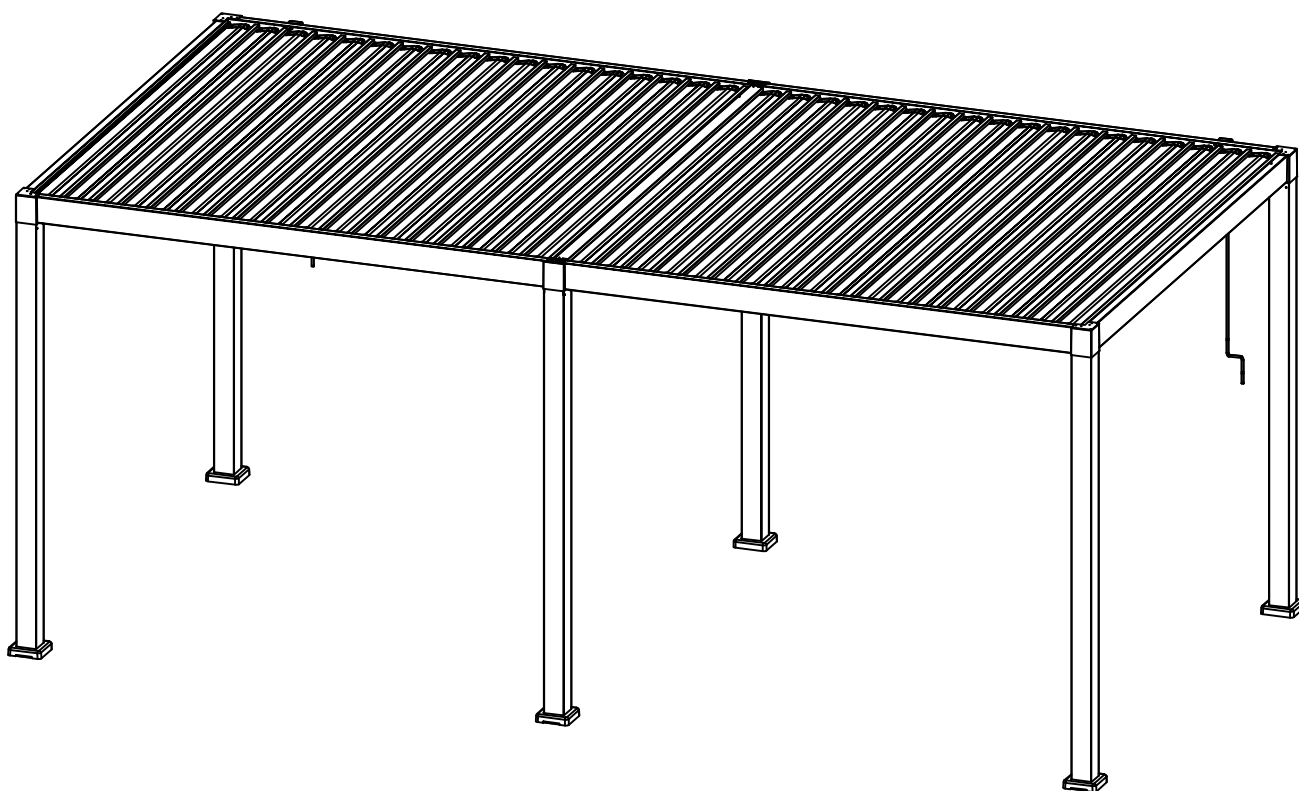



Praktischer Hinweis:

An schneereichen Tagen müssen die Jalousien offen gehalten werden, um zu verhindern, dass übermäßiger Schnee sie verbiegt.
An regnerischen Tagen ist es am besten, die unter der Pergola platzierten Produkte abzudecken.


www.josefsteiner.com

A		X4
A1		X2
B		X1
B1		X1
C		X1
C1		X1
D		X2
D1		X1
E		X36
F		X6
G		X6
H		X4
H1		X2

H2			X2
J			X2
K			X2
L			X2
1#		M6*16	X126+5
2#		M8*155	X12
3#		M8*55	X36
4#		M5*12	X26+5
5#		M5*20	X8
6#		$\phi 16 * \phi 7 * 1$	X2
7#		$\phi 20 * \phi 16 * 2$	X2
8#		M8	X18
	  	4mm 4mm 6mm	X1



A (X4)



A1 (X2)




F (X6)









G (X6)



1# (X24)

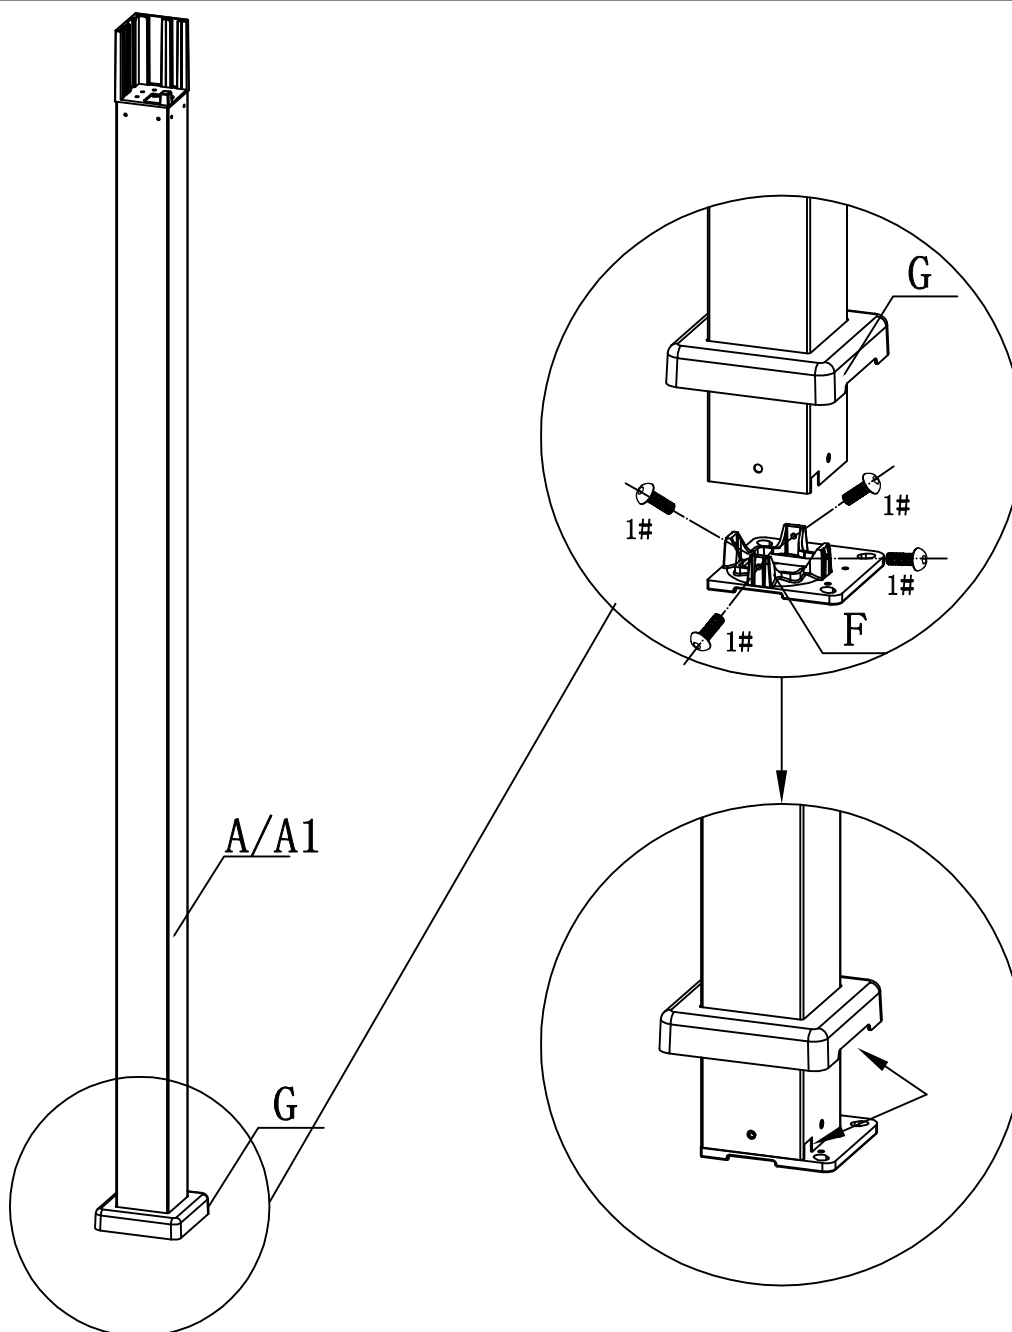

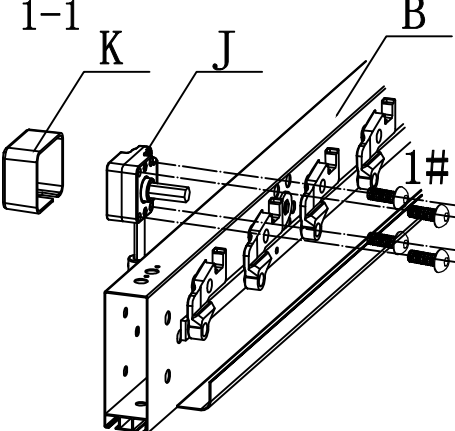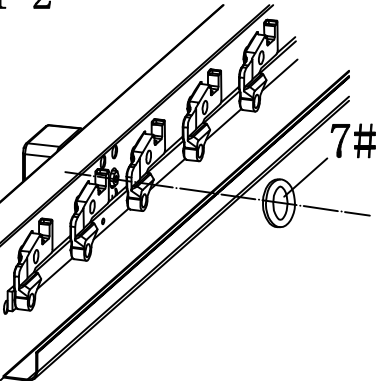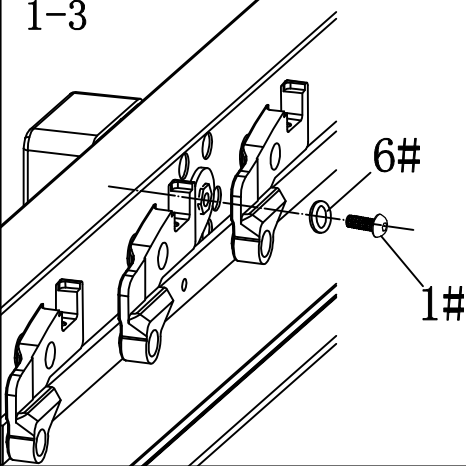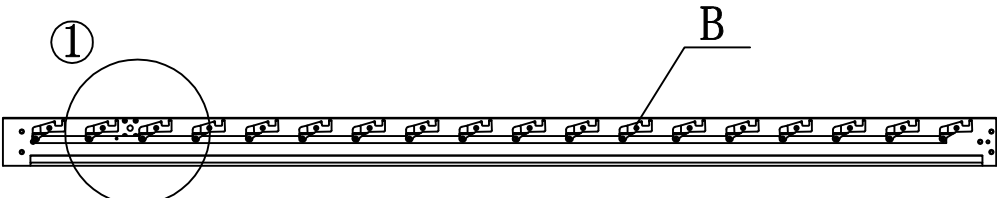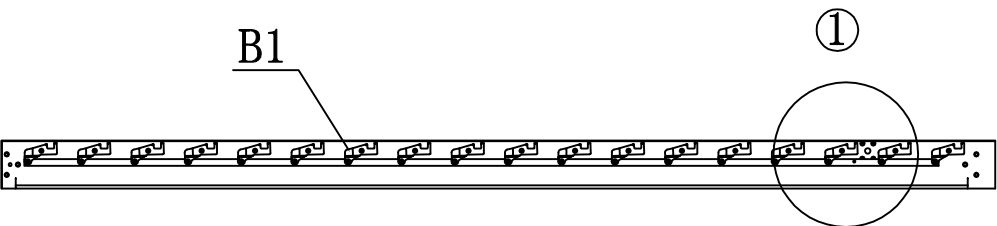
B		(X1)
B1		(X1)
J		(X2)
K		(X2)
1#	 	(X10) (X2)
1-1 	1-2 	1-3 
 		
www.josefsteiner.com		

B




(X1)

B1




(X1)

C




(X1)


C1



(X1)




2# (X8)





3# (X24)


①

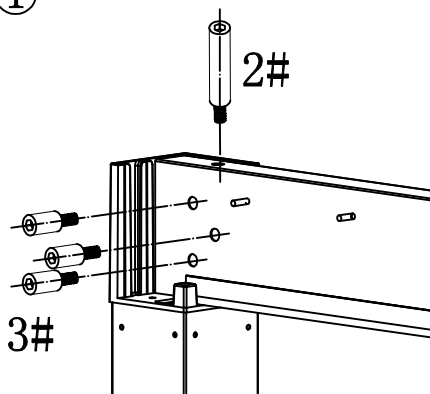


②

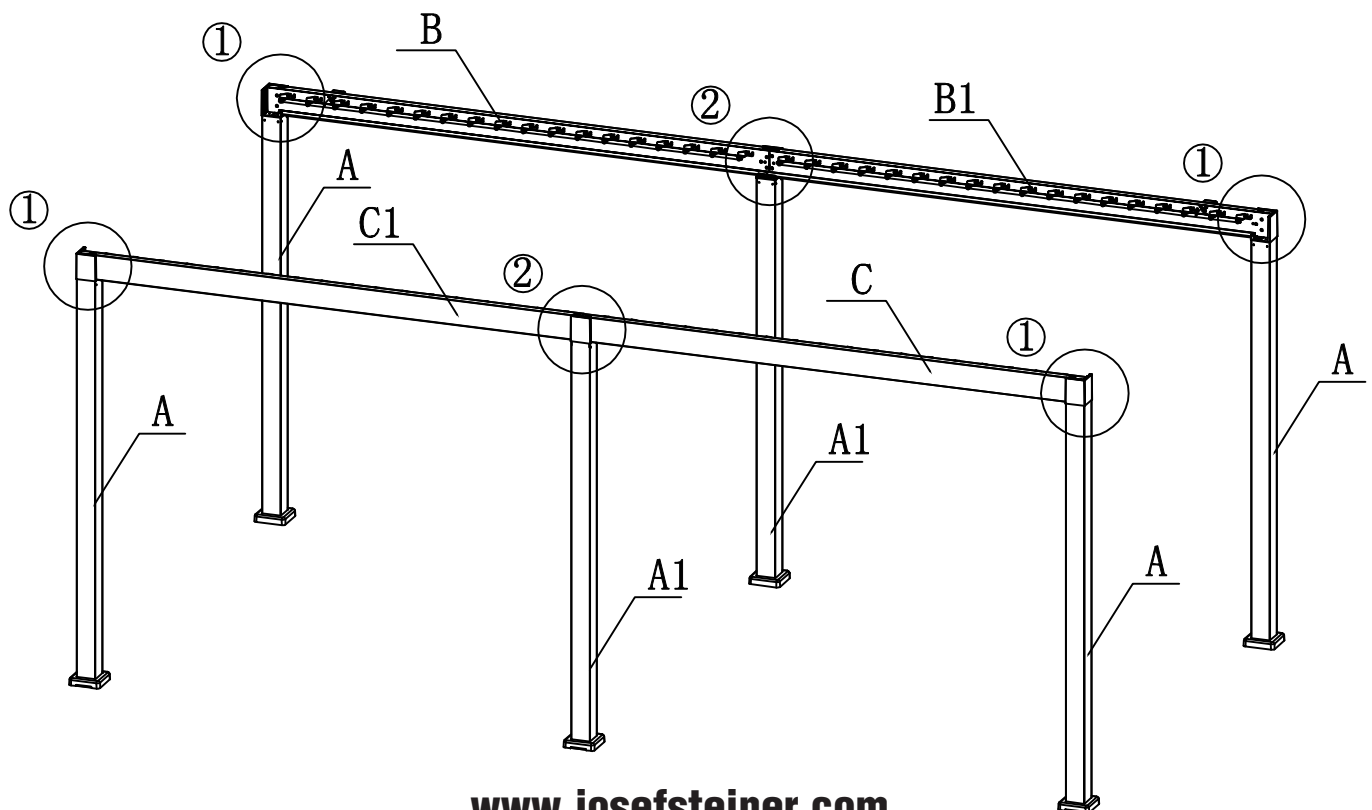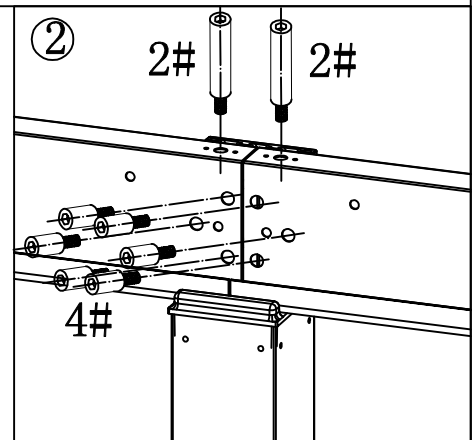


D



(X2)




2# (X4)





3# (X12)

1-1

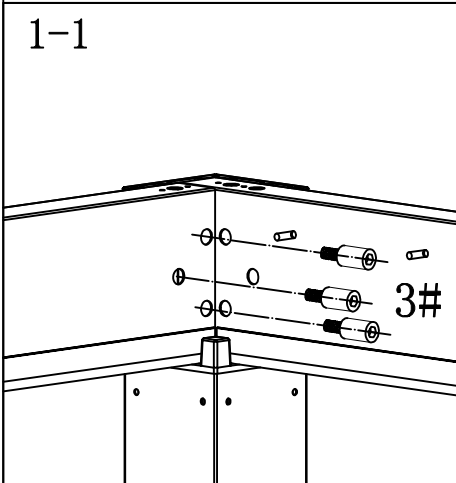

1-2

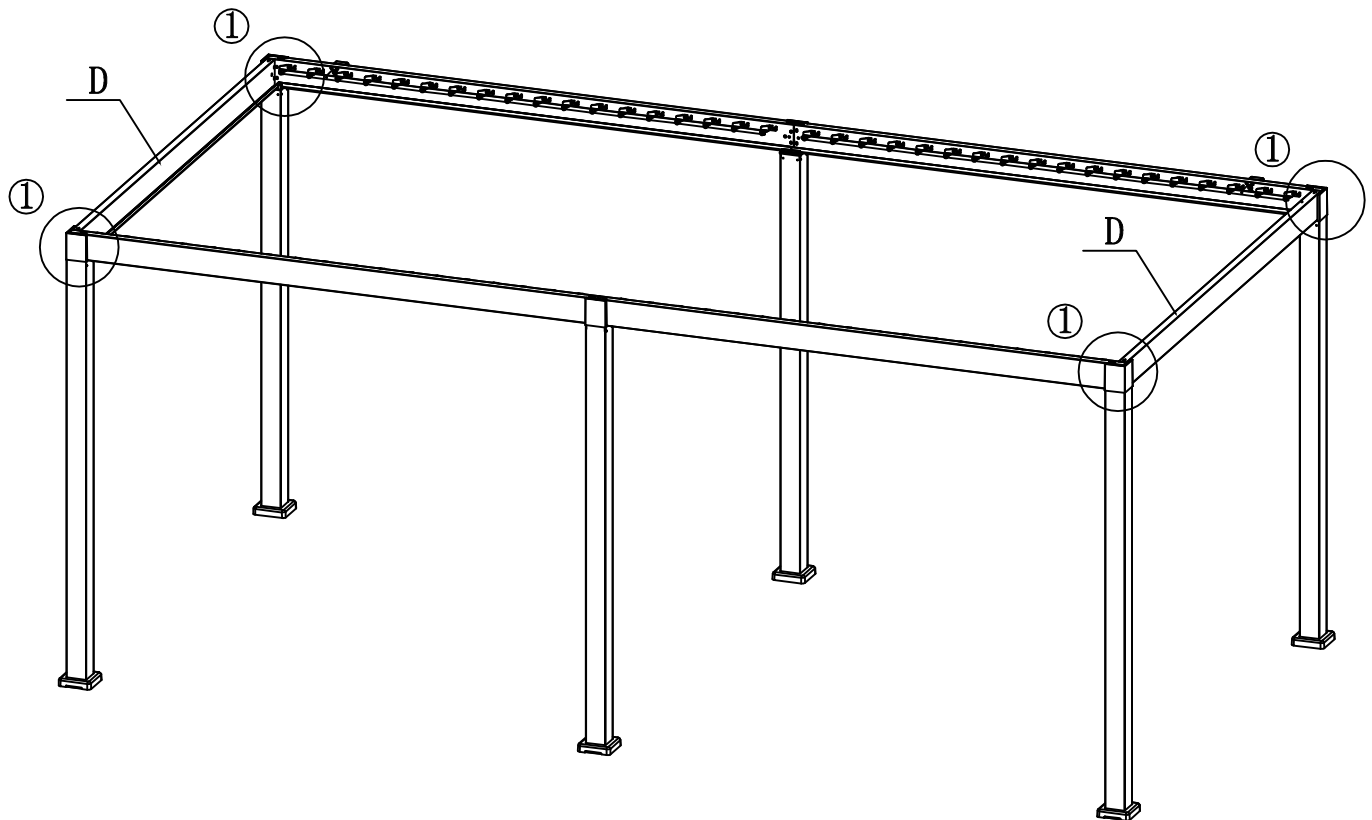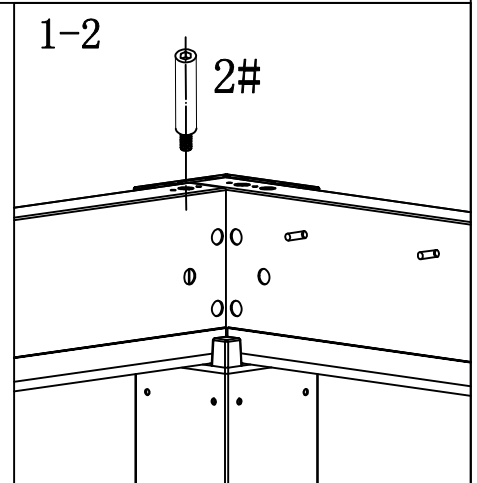

D1




(X2)

H1



(X2)

1#




(X4)

5#




(X8)


①

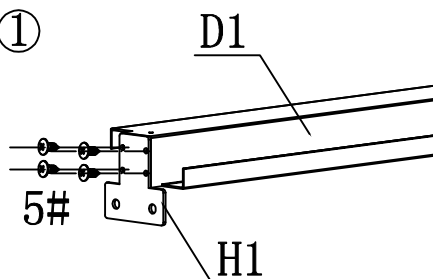


①

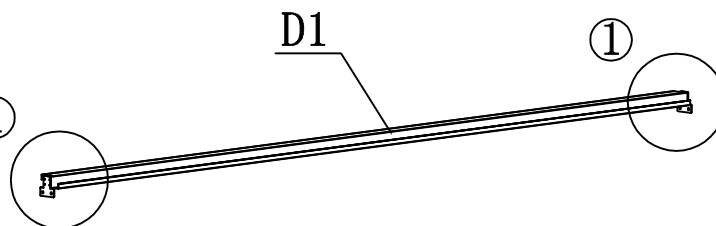


②

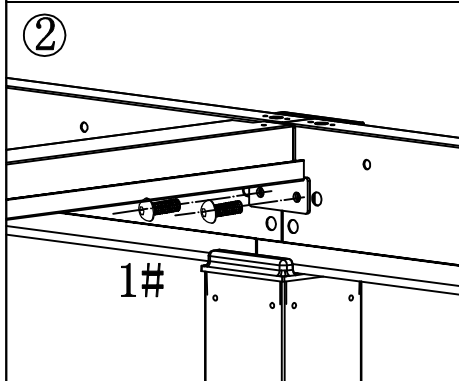

②

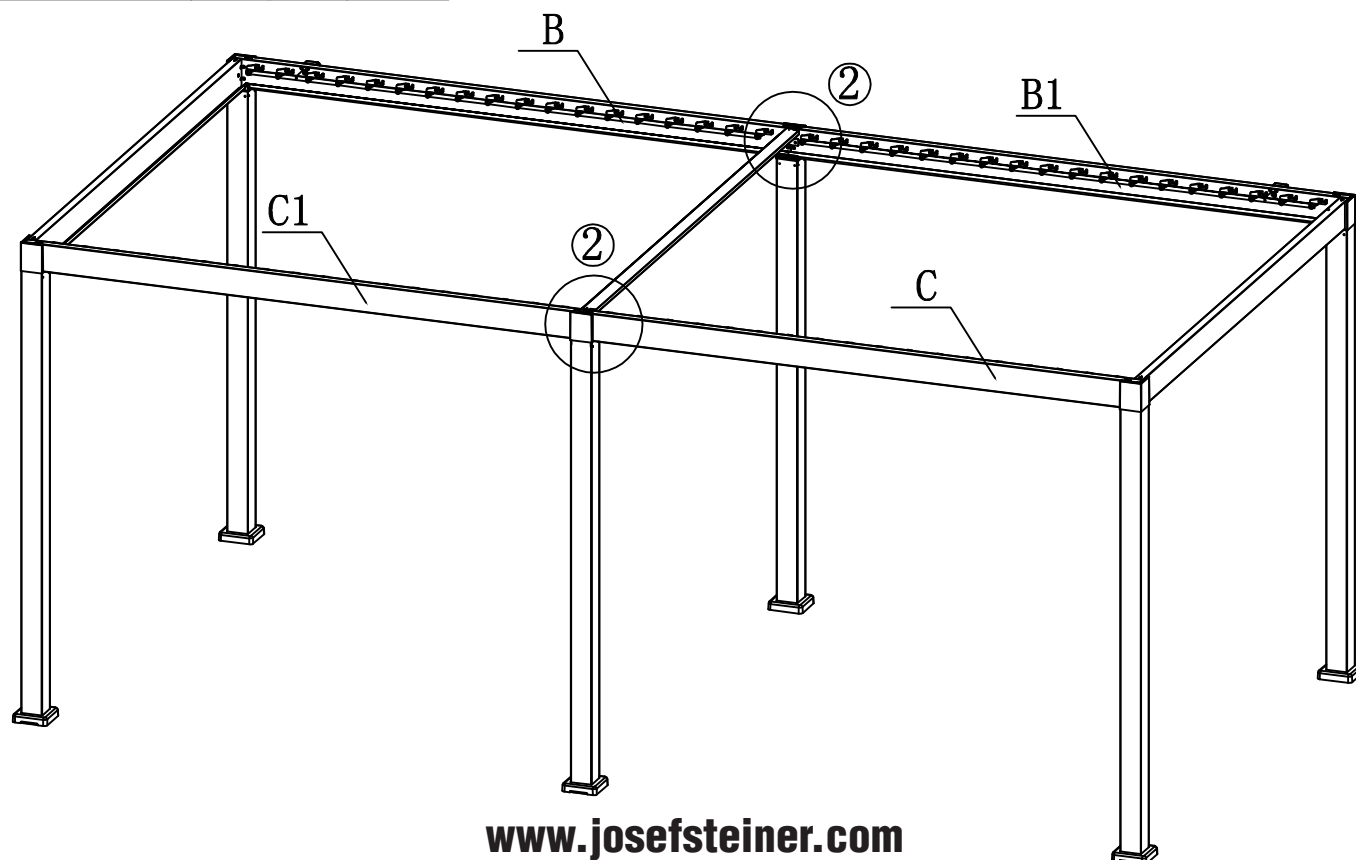


E





X36

1#



X72

1

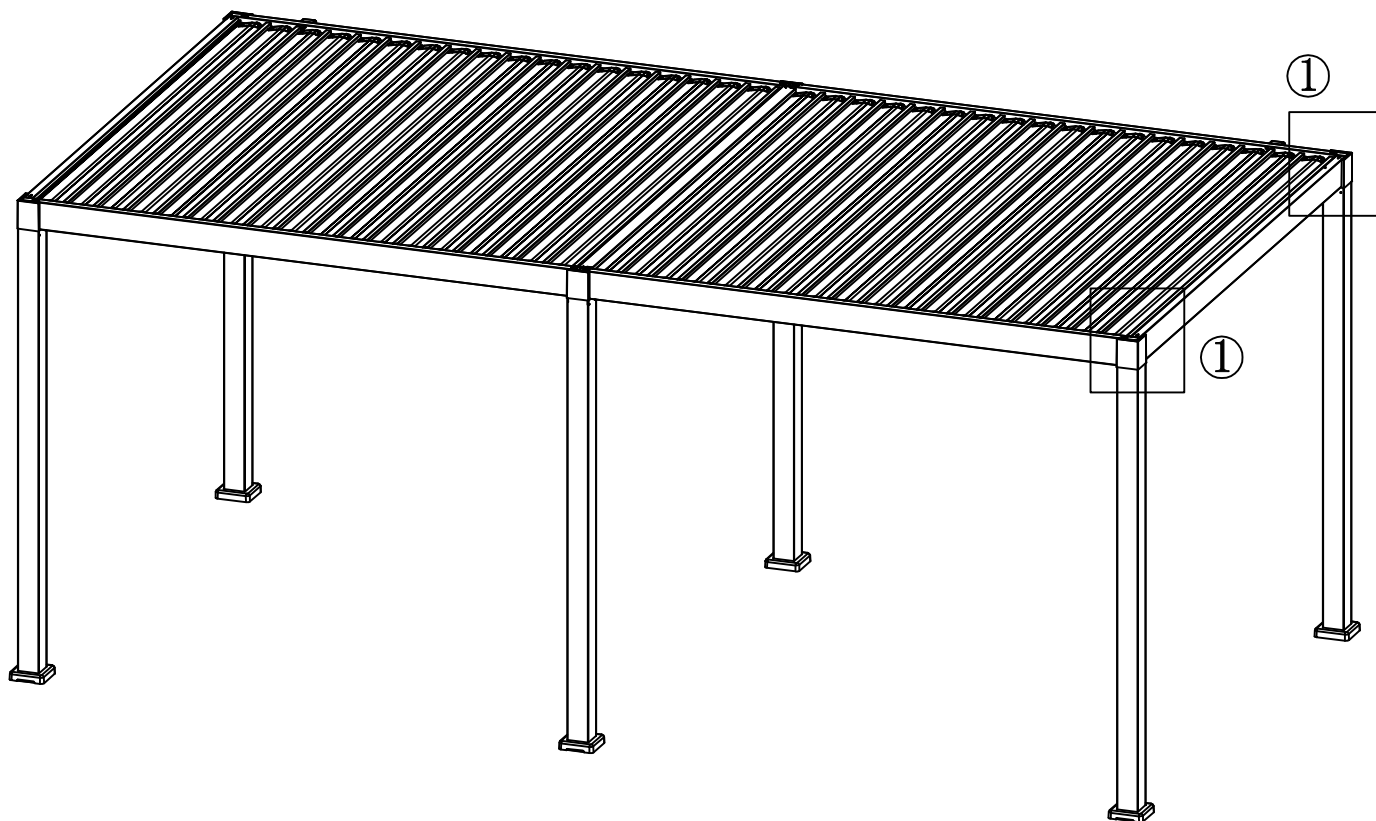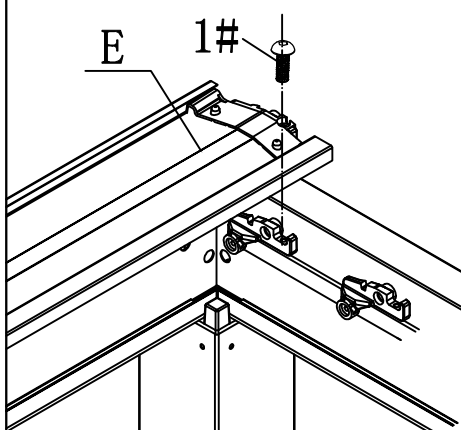




H (X4)



H2 (X2)




1# (X16)





4# (X26)


1-1

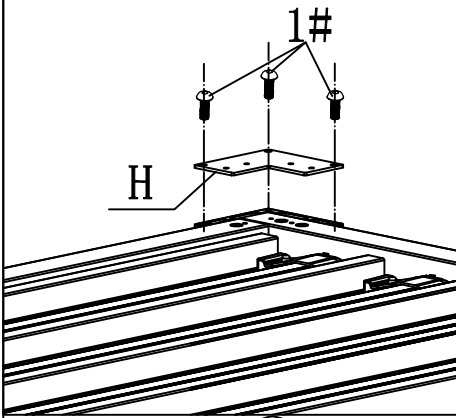


1-2

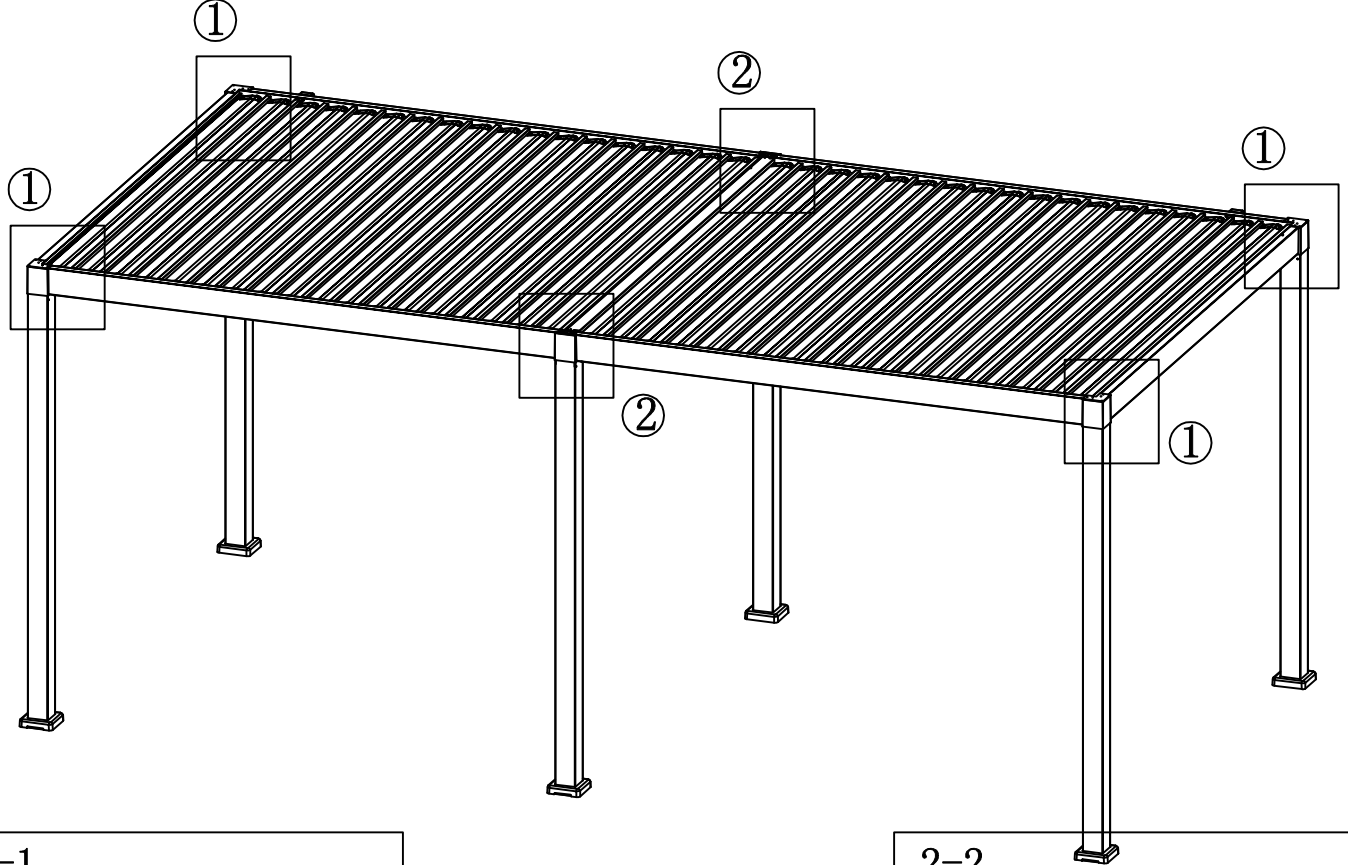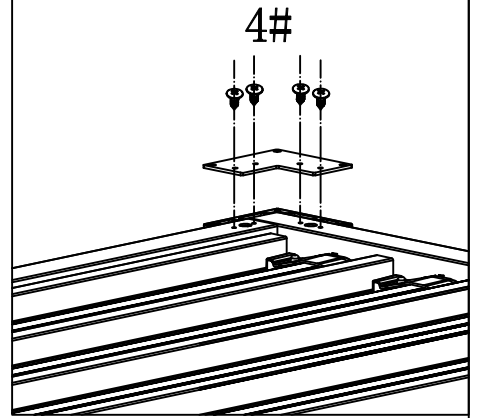

2-1

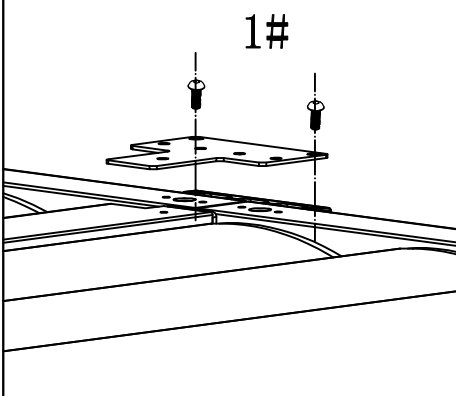



2-2

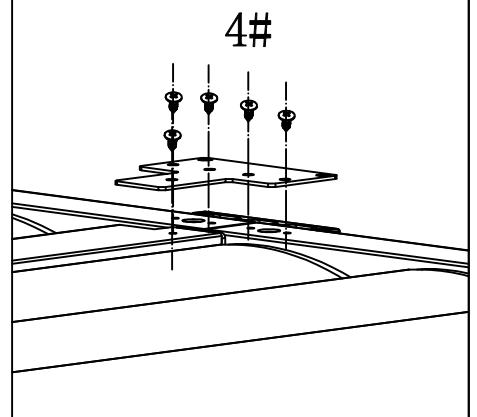


L



(X2)

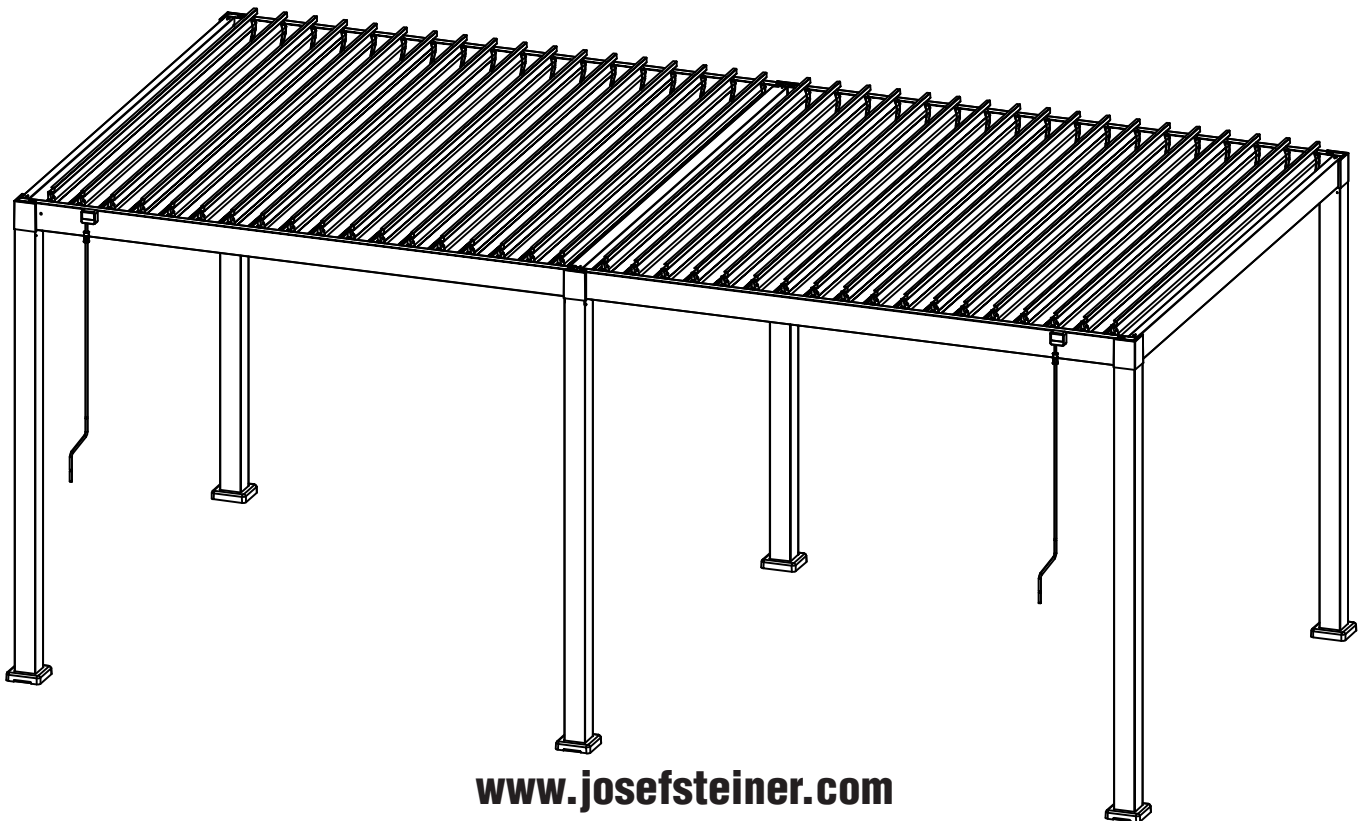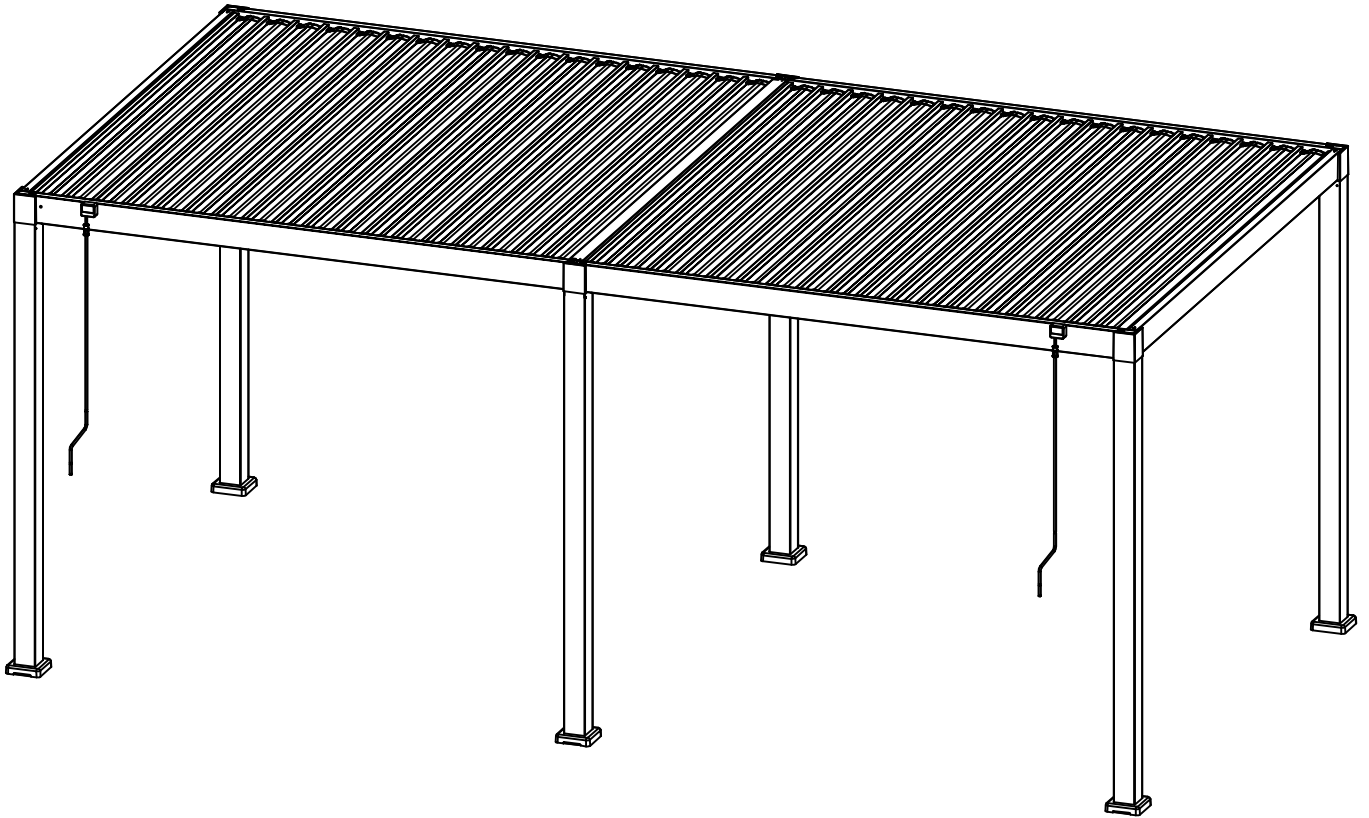

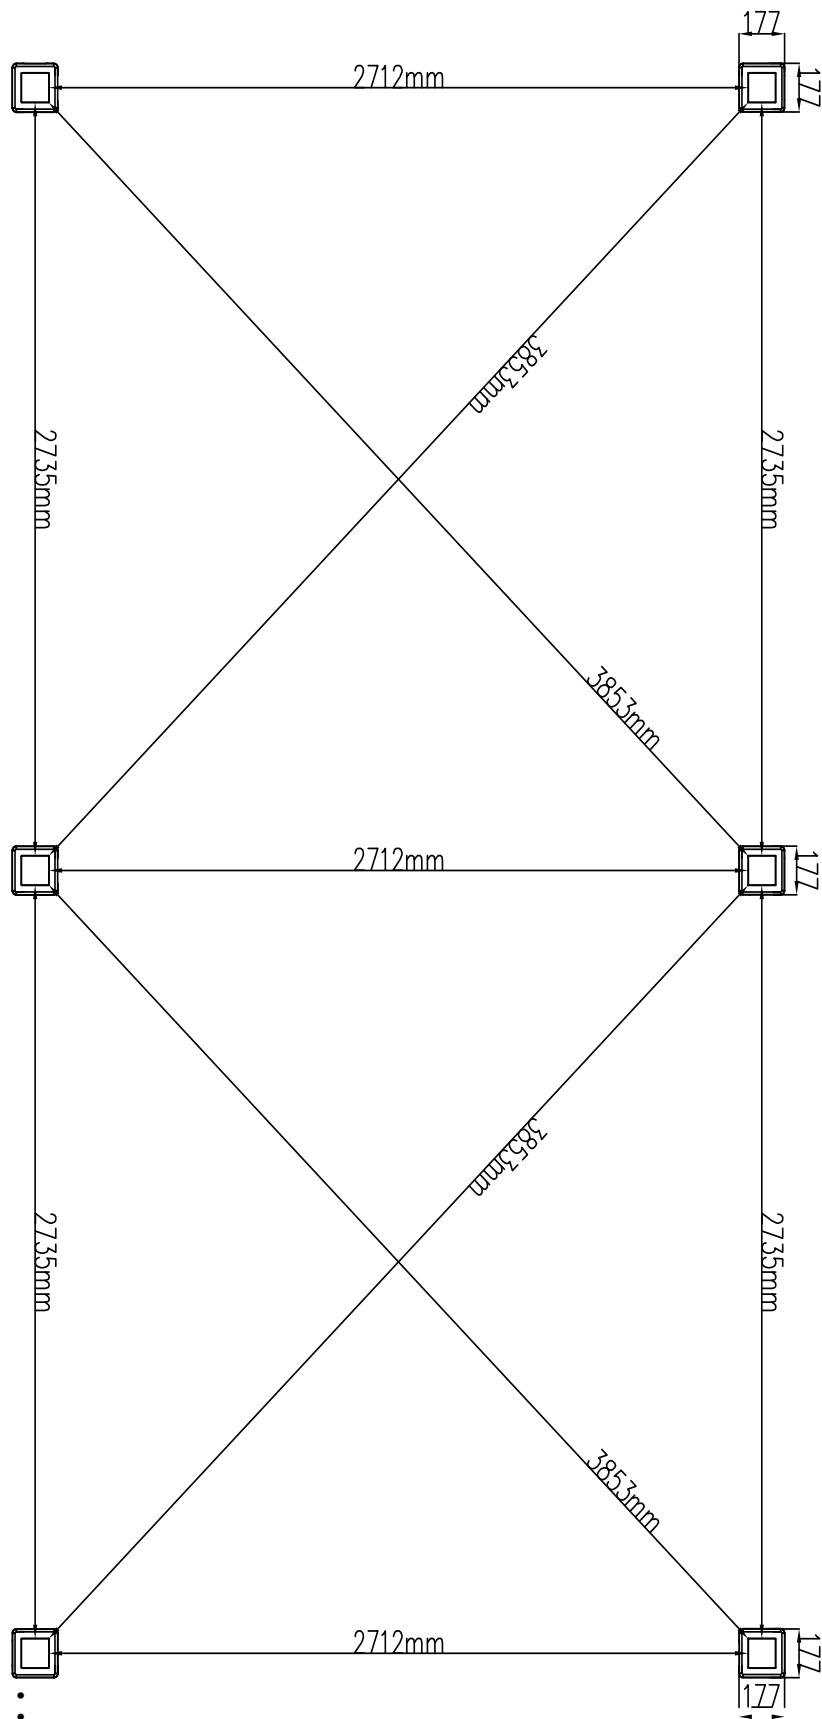


Attention :

The pergola must be installed on flat and firm ground.

To avoid any possible issue when installing other accessories in the future, please tighten all expansion bolts after making sure horizontal and vertical dimensions are correct.

www.josefsteiner.com

8#



M8

X18

